


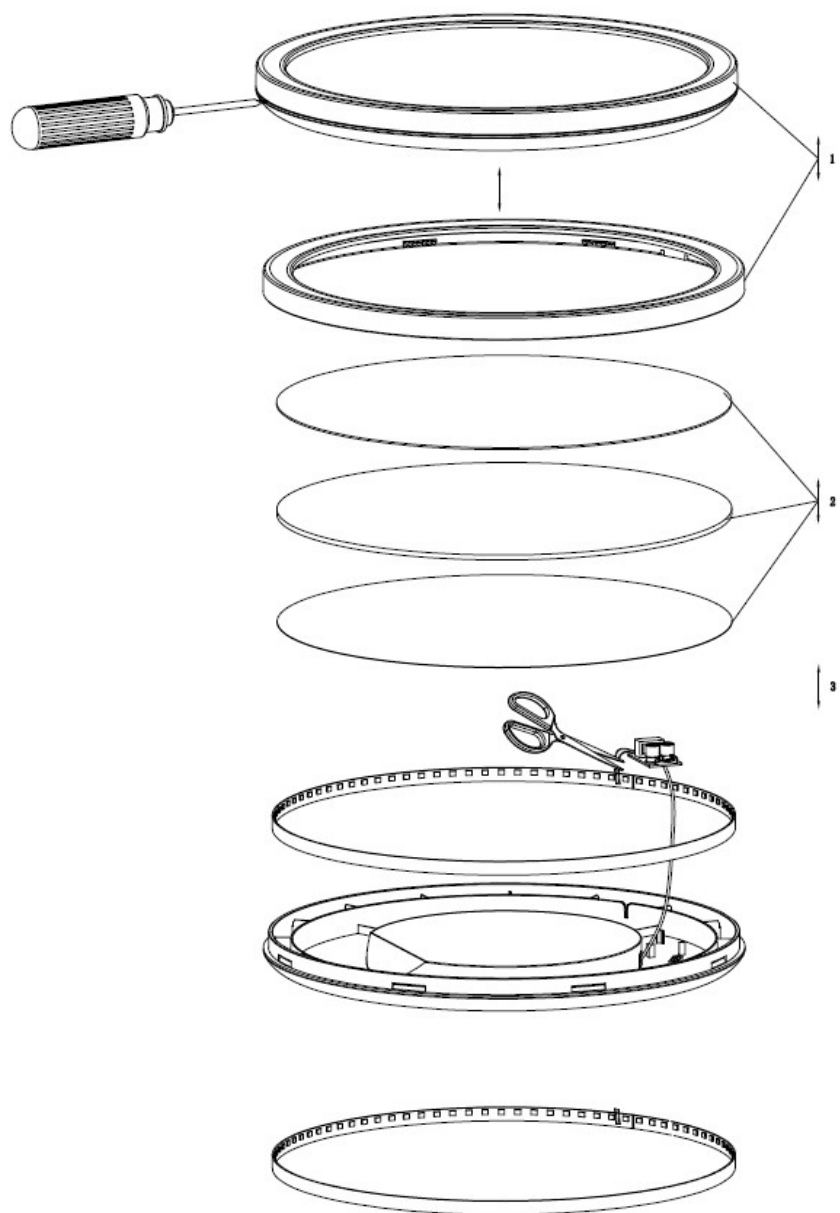

1. Disconnect from mains.
2. Open the enclosure by screw driver.
3. Remove the diffuser.
4. Cut the input wires of LED light source.
5. Take out the LED light source.